

Supported upgrade from version of control board:
V4.3.037-V7.0.044-V4.1.118-V1.0.007



- Up to 12 push buttons (with expansion up to 24);
- Possibility to connect the PAP push buttons (Open door) and PCP (close door) up to 13 stops;
- Turning off the back light after 30 minutes of inactivity the display;
- Up and down arrows.

CODES:

SERCAR_LCD_03_2.4:Display+collection calls

- GONG signal(3 tones);
- Overload signal (red icon)
- Alarm active signal in serial and in parallel (“AA+” e “AA-“);
- Alarm received signal in serial and in parallel (“AR+” e “AR-“)



CODES:

SERCAR_LCD_2.4:Display+collection calls

SERCAR_SCREEN:only display

- GONG signal (3 tones);
- Overload signal (Icon)
- Out of service signal (icon)




ICONS CONNECTOR

ALARM ACTIVE AND ALARM RECEIVED

AVAILABLE ONLY FOR:
 -SERCAR_LCD_03_2.4
 -SERCAR_SCREEN_03

Serial expansions board connector:
 SERADP_03:
 SERA_DP_04.

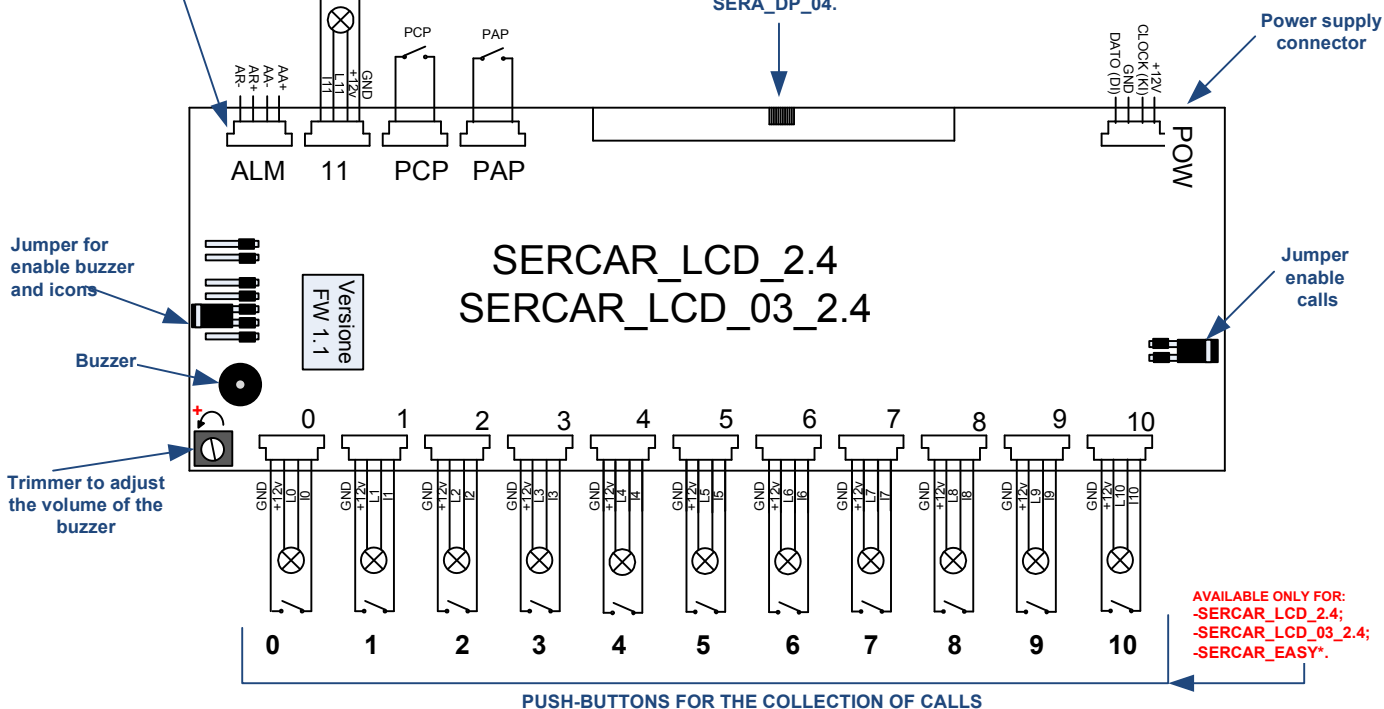

AVAILABLE ONLY FOR:
 -SERCAR_LCD_2.4;
 -SERCAR_LCD_03_2.4;
 -SERCAR_EASY*.

Code:
SERCAR_EASY:Only collection calls (NO DISPLAY).